


1: Apply some silicone around the back edge of the overflow part.

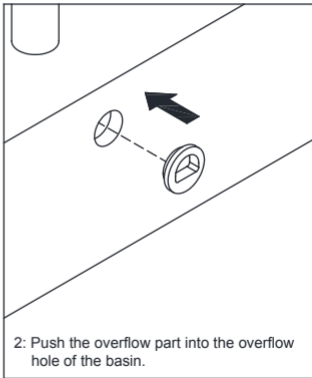

2: Push the overflow part into the overflow hole of the basin.